


Montageanleitung/Assembly Instruction

Art. Nr./Item No. 34867

DE: WICHTIG: BITTE SORGFÄLTIG LESEN UND FÜR KÜNFTIGE RÜCKFRAGEN AUFBEWAHREN

EN IMPORTANT; KEEP FOR FUTURE REFERENCE: READ CAREFULLY

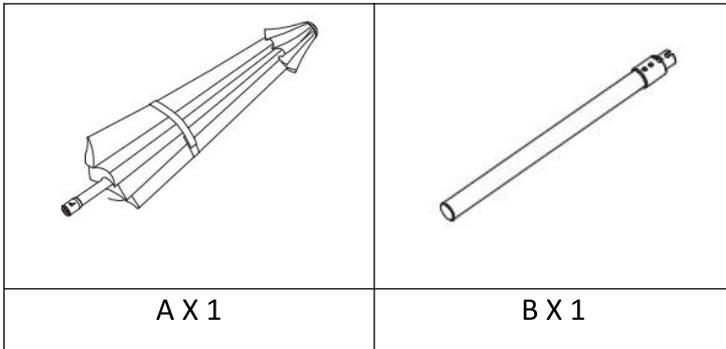

▲WARNING

When assembling and using this product, safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.


- At least two or more people are recommended for safe assembly.
- Keep all children and pets away from assembly area.
- Install on level ground.
- Check all nuts and bolts for tightness before and during usage.
- Close the umbrella in windy conditions or when a storm approaches. Never allow the umbrella to flap in the wind; this could damage the canopy.
- The cross base must be weighed down with concrete pavers to secure the umbrella. Non permanent structure. Do not use in extreme weather conditions including heavy rain or high winds.
- Do not place the product near an open flame; or too close to any heat source.

Beim Aufbau und bei der Nutzung dieses Produkts sind stets Sicherheitsvorkehrungen zu beachten, um das Risiko von Verletzungen und Schäden am Gerät zu minimieren. Bitte lesen Sie vor dem Aufbau und der Verwendung alle Anweisungen.


- Für den sicheren Aufbau werden mindestens zwei oder mehr Personen empfohlen.
- Halten Sie Kinder und Haustiere vom Montagebereich fern.
- Auf ebenem Boden installieren.
- Überprüfen Sie alle Muttern und Schrauben auf Festigkeit vor und während der Nutzung.
- Schließen Sie den Sonnenschirm bei windigem Wetter oder wenn ein Sturm naht. Lassen Sie den Schirm niemals im Wind flattern, da dies das Dach beschädigen könnte.
- Die Kreuzbasis muss mit Betonplatten beschwert werden, um den Schirm zu sichern. Nicht permanente Struktur. Verwenden Sie das Produkt nicht bei extremen Wetterbedingungen, einschließlich starkem Regen oder starkem Wind.
- Platzieren Sie das Produkt nicht in der Nähe von offenem Feuer oder zu nahe an einer Wärmequelle.

Außenmöbel für die Verwendung im Wohnbereich. Outdoor furniture for domestic use.


①

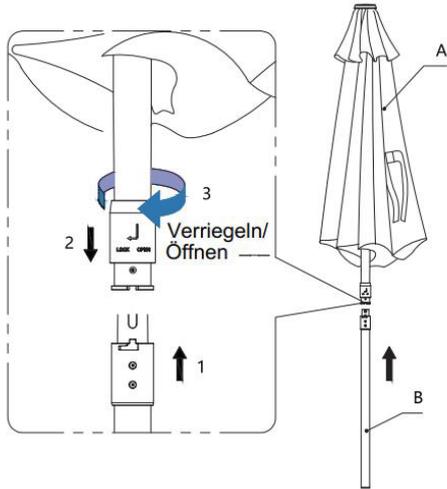

②



③

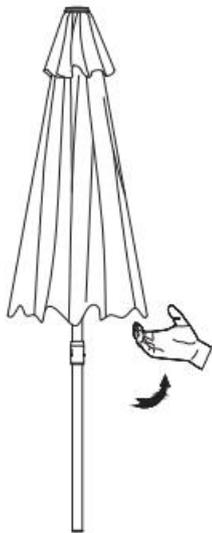


④



Push the handle upwards, as soon as the hole at the top is reached, you will hear a 'click' indicating that the screen is open and locked in place.
Schieben Sie den Griff nach oben, sobald das Loch an der Oberseite erreicht ist, hören Sie ein "Klicken", das anzeigt, dass der Schirm geöffnet ist und eingerastet ist.

⑤

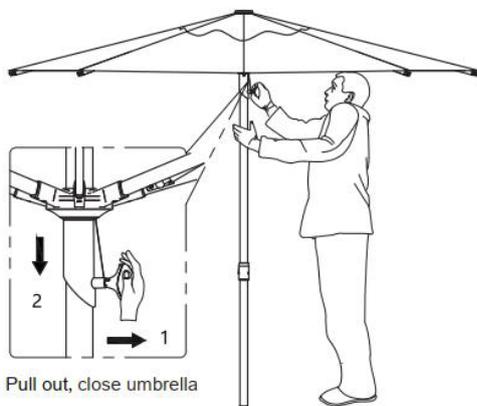

Herausziehen zum Schirm schließen

⑥

